

# SONY ERICSSON

## Bluetooth Power

Ensure Bluetooth is turned ON permanently.

## Discoverable/Visible

1. Select **Menu**
2. Select **Connectivity**
3. Select **Bluetooth**
4. Select **Options**
5. Set *Visibility* to Show Phone

## Answer Options

1. Select **Menu**
2. Select **Settings**
3. Select **Calls**
4. Select **Open to Answer**